 


Each department name

Model description and object gas

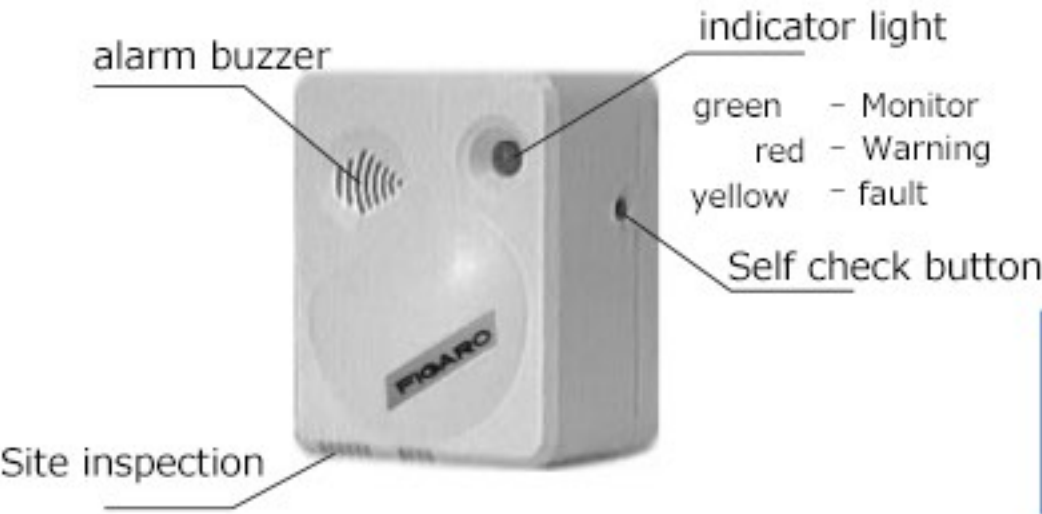

BJ - 62 - 1A

Product Number


Independent type combustible gas detector



attention

Detection of different gas detectors is not universal.

mounting position

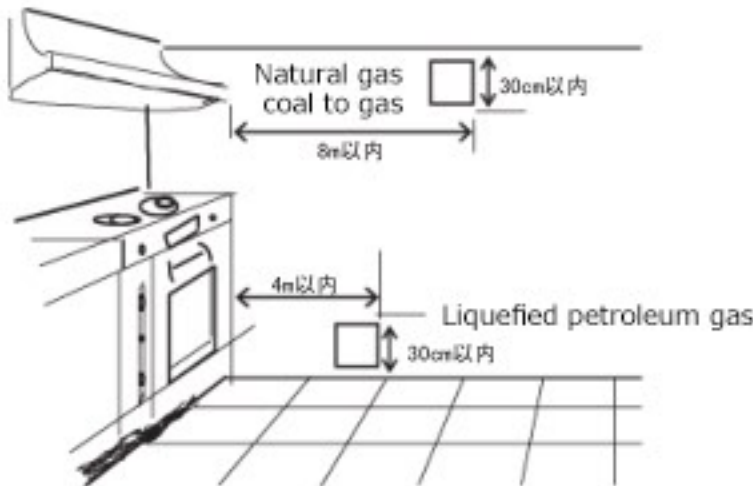

warning

- Must be installed in a room where there is a possibility of gas leakage. Other room gas leakage may not alarm.
- This detector is not used in the bathroom, must not be installed in the bathroom, there is the risk of leakage

Wiring and installation method



- ① Confirm the installation location (the material strength of the wall and the position of the AC220V)
- ② The mounting plate is fixed on the wall with a rising pipe and a screw
- ③ The mounting plate is fixed on the wall, and the power line is connected with the output wire, and the detector card is installed on the mounting plate.
- ④ Output line with DC12V pulse output, see the stop valve manual.



attention

Connection must be confirmed.

- Wiring polarity, type and so on, please be sure to pay attention to.
- Connection is required when the power is off.
- Do not fall when the detector is installed.
- Be careful not to get hurt when installing.

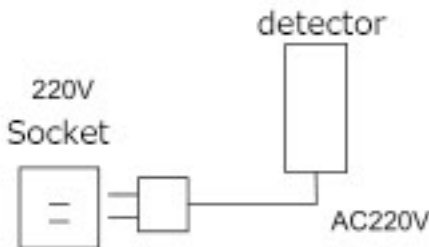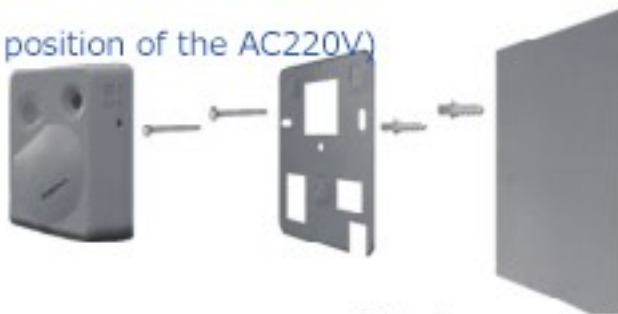

Output terminal:
the inside is positive.
Negative lateral

usage method

When the detector is connected to the power supply, it will have the following action:

- ①Power supply: on the power supply, buzzer interrupted for a few seconds, the green light.
- ②Monitoring: about 2 minutes later, the green light continues to light, the probe into the normal monitoring state.
- ③Self test: press the self test key, the red light, after the yellow light, buzzer intermittent ring.
- ④Alarm (4): environmental gas leakage and alarm concentration to that red light and intermittent buzzer rang, delay (about 20 seconds) with output.
- ⑤The fault detector: when detecting the internal component failure, the yellow lights, buzzer ringing.
- ⑥The environment of gas recovery: after the disappearance of the red light, stop the alarm sound, no output, monitor the status of recovery. With pulse output function, the appliance should be closed under the condition of manual reset valve.
- ⑦Seventhly, break: normal monitoring state, with pulse output function. If the detector and cut-off valve connection disconnection, yellow lights, lights flashing alternately.

Inspection method

(natural gas, liquefied petroleum gas series, as shown below)



- ①In the normal monitoring state, the gas detector will be detected by the gas detector, when the alarm concentration is reached, the alarm action is normal.
- ②Second, during the normal use, to do a check on the detector every month. Daily inspection with visual method to confirm the green light can be lit.
- ③When the gas is detected with a silent light alarm, please contact the agency.